

FUNCTION DESCRIPTION OF FACE BUTTONS



HAND CONTROL OPERATION INSTRUCTION BOOK

1. Plug in the power adapter (the power hole is the lowest circular socket).
All function buttons are white.
2. Press button "1" to power on. All function buttons turn green, and the main unit enters intelligent massage mode. Press again to turn off, and the buttons return to white.
3. Press button "2" to select the mode, with the corresponding modes 1, 2, and 3 displayed in indicator area "13", and these three modes can be switched cyclically.
4. Button "3" and "4" are the keys for adjusting massage intensity, The intensity has 3 levels and can only be adjusted in one direction.
The current level is displayed in indicator area "13" during adjustment.
5. Press button "5" to select the massage area, switching between feet, calves, and full legs, with corresponding display on indicator areas "10", "11", and "12".
Press button "2" to exit massage area selection and enter full-leg mode.